

OPERATING INSTRUCTION

Speed control

Speed is controlled by the button switch or rotary switch.

0--Off 1—Low 2—High

Oscillation control

To make the fan oscillate, push down on the oscillation knob located on the top of the motor housing. To stop the fan down from oscillating in the position desired, push on the oscillating knob once more.

Tilt control

The airflow can be adjusted upward or downward by tilting the fan head to a vertical angle as desired.

MAINTENANCE INSTRUCTION

The fan requires little maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is needed.

1. Before cleaning and assembling, do not plug the pins into the socket.
2. To ensure adequate air circulation to the motor. Keep vents at the rear of the motor housing from dust, fluff and etc. A vacuum cleaner can not be used to clean these vents before unplug. Do not disassemble the fan remove fluff.
3. Please wipe the exterior parts with a soft cloth soaking a mild detergent.
4. Do not use any abrasive detergent or solvents to avoid scratching the surface. Do not use of the following as a cleaner: gasoline, thinner, bending.
5. Do not allow water or any other liquid into the motor housing or interior parts.

CLEANING

1. Be sure to unplug from the electrical supply source before cleaning.
2. Plastic parts should be cleaned with a soft cloth moisten with mild soap. Thoroughly remove soap film with dry cloth.

DISPOSAL: Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.



CAUTION

Read Rules for Safe Operation and Instructions Carefully.

WARNING

1. Do not leave the fan running unattended.
2. Keep electrical appliances out of reach from Children or infirm persons. Do not let them use the appliances without supervision.
3. Ensure that the fan is switched off from the supply mains before removing the guard.
4. If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance.

WARNING INSTRUCTIONS


PLUG REPLACEMENT

This appliance is supplied with a BS1363 3 pin plug fitted with a 3 Amp fuse. Should the fuse require replacement, it must be replaced with a fuse rated at 3 Amp and approved to BS1362.

In the event the mains plug has to be removed/replaced for any reason, please note:

IMPORTANT: The wires in the mains lead are coloured in accordance with the following code:

Blue – Neutral
Brown – Live

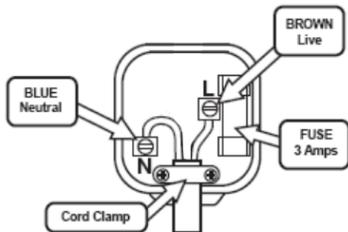

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows. The blue wire must be connected to the terminal marked with an N or coloured black. The brown wire must be connected to the terminal marked with an L or coloured red.

WARNING: Never connect live or neutral wires to the earth terminal of the plug.


NOTE: If a moulded plug is fitted and has to be removed take great care in disposing of the plug and severed cable, it must be destroyed to prevent engaging into a socket.

Q-CONNECT[®]

OPERATING INSTRUCTIONS

Model: KF00402 (STF9D)

2 Speed Oscillating Desk Fan

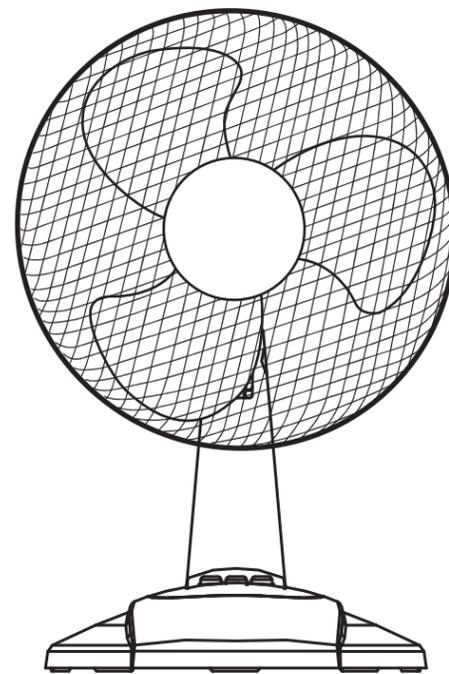

FITTED WITH
BS1363
BSI APPROVED PLUG


Read these instructions and keep for future reference

RULES FOR SAFE OPERATION

1. Never insert fingers, pencils, or any other object through the grille when fan is running.
2. Disconnect fan when moving from one location to another.
3. Disconnect fan when removing grilles for cleaning.
4. Be sure fan is on a stable surface when operating to avoid overturning.
5. DO NOT use fan in window, rain may create electrical hazard.
6. Indoor use only.

PART FIGURE

1. Front fuard
2. Blade
3. Plastic nut
4. Rear guard
5. Motor shaft
6. Oscillation knob
7. Fan body
8. Spinner
9. Chassis
10. Speed control buttons
11. Tight
12. Loose

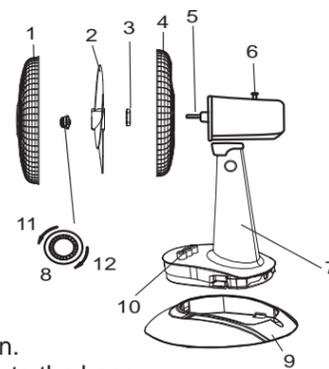

ASSEMBLY OF BASE

1. Detach screw from base of the fan.
2. Match locking tab to base and click into position.
3. Tighten the screw in the base to secure the fan to the base.

ASSEMBLY OF BLADE OF GRILLES

1. Remove the spinner on the head unit by turning it clockwise. Then remove the plastic nut by turning it counterclockwise.
2. Place the rear guard to the head unit so that the handle is upward.
3. Screw on the plastic nut (clockwise) securing the fan guard on the head unit. (Step 1.2.3 see Fig.1).
4. Discard the small plastic sleeve located on the motor shaft.
5. Install the fan blade onto the motor shaft. Make sure the fan blade slot fits into the retaining pin of the motor shaft. (Step 4.5 see Fig.2)
6. Attach the spinner to the motor shaft by turning it counterclockwise to secure the fan blade.
7. Place the circlip around the rear guard (You can skip this step if the circlip is already attached to the rear guard.)
8. Secure both guards firmly by tightening the fan guard then close easy clip. (Step 7.8 see Fig.3)

