

- Unscrew and remove the height adjustment ring, slide the cover plate down the column to rest on stand.
  - Pull up the extension tube, refit the height adjustment ring.
- CAUTION:** Height adjustment ring must be tightened before the assembly of the motor section to the stand.

## PRODUCT ASSEMBLY

Remove the locking screw at the very bottom of the Head/push-button assembly, locate the Head/push-button assembly onto the column internal pole(10), refit the locking screw and tighten it.

## OPERATING INSTRUCTION

Insert the mains plug into a suitable mains socket, push on the speed control button to desired speed: 0-Off 1-Low 2-Medium 3-High

The fan can operate in oscillation or static mode:

To make the fan head oscillate, push down the Oscillation Knob located on the rear of the head assembly.

To stop the fan head from oscillating, pull-up the Oscillation Knob.

The head of the fan can be adjusted up or down. To do this, hold the head and adjust the fan to the desired angle.

## MAINTENANCE INSTRUCTION

The fan requires little maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is needed.

- Before cleaning and assembling, do not plug the pins into the socket.
- To ensure adequate air circulation to the motor. Keep vents at the rear of the motor housing from dust, fluff and etc. A vacuum cleaner can not be used to clean these vents before unplug. Do not disassemble the fan remove fluff.
- Please wipe the exterior parts with a soft cloth soaking a mild detergent.
- Do not use any abrasive detergent or solvents to avoid scratching the surface.
- Do not use of the following as a cleaner: gasoline, thinner, bending.
- Do not allow water or any other liquid into the motor housing or interior parts.

## CLEANING

- Be sure to unplug from the electrical supply source before cleaning.
- Plastic parts should be cleaned with a soft cloth moisten with mild soap. Thoroughly remove soap film with dry cloth.

**DISPOSAL:** Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

3

## CAUTION

Read Rules for Safe Operation and Instructions Carefully.

## WARNING

- Do not leave the fan running unattended.
- Keep electrical appliances out of reach from Children or infirm persons. Do not let them use the appliances without supervision.
- Ensure that the fan is switched off from the supply mains before removing the guard.
- If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

## WARNING INSTRUCTIONS

### PLUG REPLACEMENT


This appliance is supplied with a BS1363 3 pin plug fitted with a 3 Amp fuse. Should the fuse require replacement, it must be replaced with a fuse rated at 3 Amp and approved to BS1362.

In the event the mains plug has to be removed/replaced for any reason, please note:

**IMPORTANT:** The wires in the mains lead are coloured in accordance with the following code:

Blue – Neutral

Brown – Live

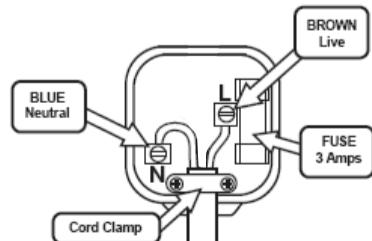

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows. The blue wire must be connected to the terminal marked with an N or coloured black. The brown wire must be connected to the terminal marked with an L or coloured red.


**WARNING:** Never connect live or neutral wires to the earth terminal of the plug.

**NOTE:** If a moulded plug is fitted and has to be removed take great care in disposing of the plug and severed cable, it must be destroyed to prevent engaging into a socket.

**Q-CONNECT®**

## OPERATING INSTRUCTIONS

### Model: KF00404

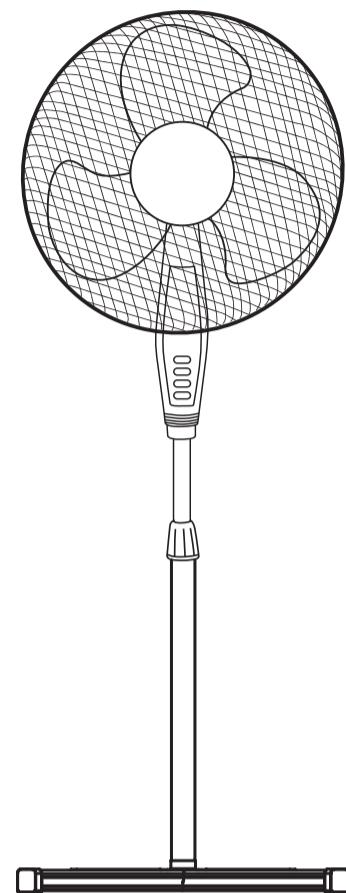

## 3 Speed Oscillating Stand Fan




Read these instructions and keep for future reference

## RULES FOR SAFE OPERATION

- Never insert fingers, pencils, or any other object through the grille when fan is running.
- Disconnect fan when moving from one location to another.
- Disconnect fan when removing grilles for cleaning.
- Be sure fan is on a stable surface when operating to avoid overturning.
- DO NOT use fan in window, rain may create electrical hazard.
- Indoor use only.




## PART FIGURE

- Front Guard
- Blade Nut
- Fan Blade
- Plastic Nut
- Back Guard
- Motor Shaft
- Motor
- Oscillating Knob
- Speed Regulator
- Internal Pole
- Height Adjustment Ring
- Column
- Base Stand

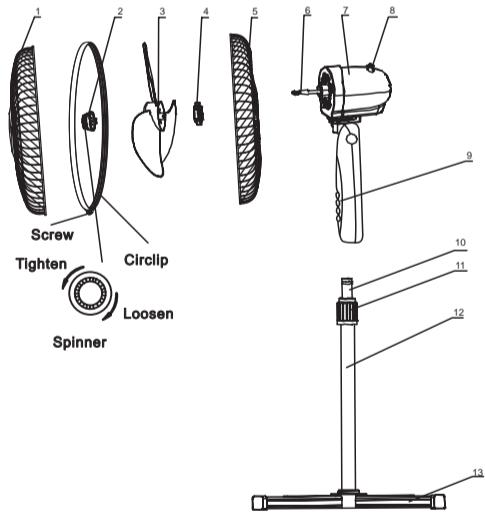

## ASSEMBLY OF BLADE OF GRILLES

- Remove the spinner and the plastic nut from the front side of the motor. Fix the rear grille to the motor then tighten the plastic nut again. (Fig.1)
- Discard PVC sleeve on shaft. Insert the blade into shaft, make sure the stopper pin is fitted into groove of the blade. Turn the spinner counter clockwise to tighten the blade. (Fig.2)
- Fix both grilles with plastic rim and then use screwdriver to tighten the locking screw. (Fig.3)

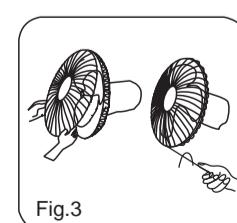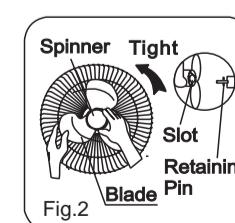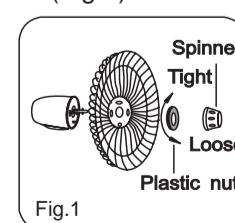

## BASE AND COLUMN ASSEMBLY

- Position both base tubes to form a X, locate column in position, fit four screws/washers and tighten securely.