


1. Installing the mounting bracket
Fix the supplied mounting bracket firmly to the wall using the three screws.


NOTE: The bracket should be positioned at least 35 cm from the ceiling and at least 30 cm from adjoining wall.

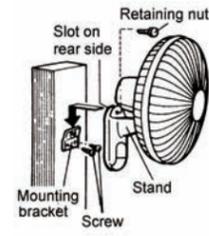

2. Installing the stand

Mount the stand on the bracket by inserting the bracket catch into the slot on the stand.

Fix the stand onto the bracket with a retaining nut
NOTE: If the retaining nut does not pass through the holes, push the stand downwards until it is fully mounted on the bracket.

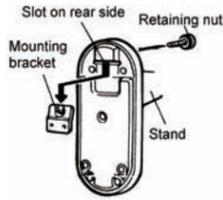

OPERATING INSTRUCTION

• SPEED CONTROL


Adjust to the desired speed by pulling the pull switch (A).
0---Stop 1---Low 2---Medium 3---High

• OSCILLATION CONTROL

Adjust the position of the oscillation by pulling the pull switch (B).

• TILT ADJUSTMENT

Push the guard lightly to the desired up or down direction.

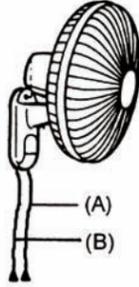

MAINTENANCE INSTRUCTION

The fan requires little maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is needed.

1. Before cleaning and assembling, do not plug the pins into the socket.
2. To ensure adequate air circulation to the motor. Keep vents at the rear of the motor housing from dust, fluff and etc. A vacuum cleaner can not be used to clean these vents before unplug. Do not disassemble the fan remove fluff.
3. Please wipe the exterior parts with a soft cloth soaking a mild detergent.
4. Do not use any abrasive detergent or solvents to avoid scratching the surface. Do not use of the following as a cleaner: gasoline, thinner, bending.
5. Do not allow water or any other liquid into the motor housing or interior parts.

CLEANING

1. Be sure to unplug from the electrical supply source before cleaning.
2. Plastic parts should be cleaned with a soft cloth moisten with mild soap. Thoroughly remove soap film with dry cloth.


DISPOSAL: Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.



Q-CONNECT®

OPERATING INSTRUCTIONS Model: KF00406

3 Speed Oscillating Wall Fan

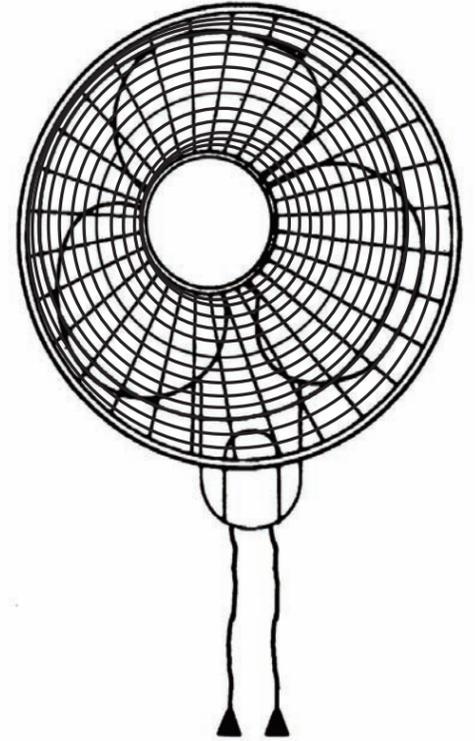

FITTED WITH
BS1363
BSI APPROVED PLUG

Read these instructions and keep for future reference

CAUTION

Read Rules for Safe Operation and Instructions Carefully.

WARNING


1. Do not leave the fan running unattended.
2. Keep electrical appliances out of reach from Children or infirm persons. Do not let them use the appliances without supervision.
3. Ensure that the fan is switched off from the supply mains before removing the guard.
4. If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance.

WARNING INSTRUCTIONS

WARNING: THIS APPLIANCE MUST BE EARTHED

This appliance is fitted with a fused BSI approved BS1363 plug fitted with a 3 amp fuse. In case you need to change the plug, please make electrical connections according to the following wiring instructions.

CAUTION: DO NOT USE IF AC MAINS SUPPLY CORD IS DAMAGED. REPLACE THE DAMAGED CORD WITH AN APPROPRIATE REPLACEMENT.

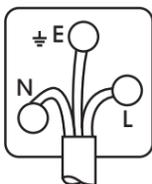

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:
GREEN & YELLOW - EARTH BLUE - NEUTRAL BROWN - LIVE


As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green and yellow must be connected to the terminal in the plug marked with the letter **E** or by the earth symbol \perp or coloured green or green and yellow.
The wire which is coloured blue must be connected to the terminal marked with a letter **N** or coloured black.
The wire which is coloured brown must be connected to the terminal marked with a letter **L** or coloured red.

RULES FOR SAFE OPERATION




1. Never insert fingers, pencils, or any other object through the grille when fan is running.
2. Disconnect fan when moving from one location to another.
3. Disconnect fan when removing grilles for cleaning.
4. Be sure fan is on a stable surface when operating to avoid overturning.
5. DO NOT use fan in window, rain may create electrical hazard.
6. Indoor use only.

PART FIGURE

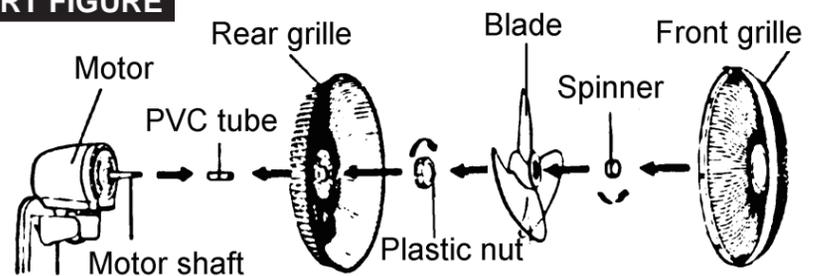

ASSEMBLY OF BLADE OF GRILLES

1. Unscrew the spinner clockwise (or take the spinner out from the bag) and the plastic nut counter clockwise to remove both of them. Fix the rear guard to the motor then tighten the plastic nut again. (Fig. 1)
2. Discard PVC sleeve on shaft. Insert the blade into shaft, and make sure the rotor shaft pin is fitted into groove of the blade. Turn the spinner counter clockwise to tighten the blade. (Fig. 2)
3. Fasten the front guard and the rear guard by the guard clip and then tighten the fan guard locking screw and nut. (Fig. 3)

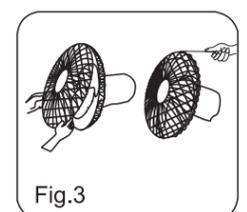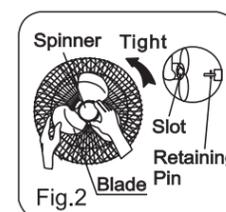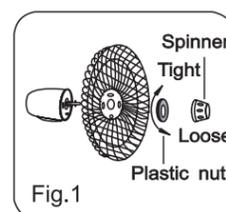

INSTALLATION INSTRUCTIONS

The fan should be installed on a solid wooden or pillar, which stands vertically to the floor.
Caution: To prevent the fan from falling off, do not install it on walls less than 10 cm thick or made of materials that are easily damaged.

