


INSTRUCTION MANUAL FOR ELECTRONIC DIGITAL SAFE

KF04390 - KF10473

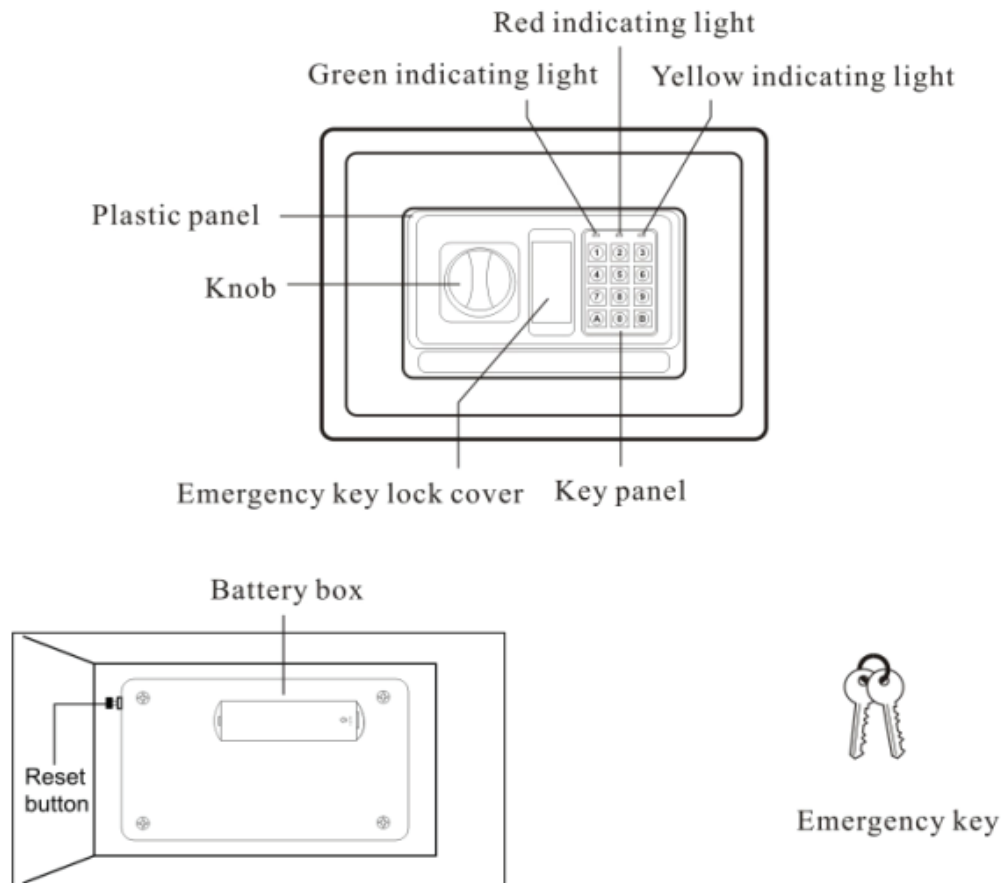

Open the safe for the first time:

Remove the emergency key lock cover located in the middle of the plastic panel, insert the emergency key, turn it to the left, and turn the knob to the right at the same time. The safe will then open.

Install batteries:

Open the battery box cover at the back of the door and install the batteries correctly (4X AA batteries).

Setting and changing of personal code:

Open the safe and press the red button on the back of the door.

The yellow indicator light will flash, at which time you can enter any 3-to-8-digit personal code you want, and then press "B" for confirmation.

Open the safe using personal code:

Enter the 3-to-8-digit personal code you have set and press "B" for confirmation. The green light will flash; turn the knob to the right, and the safe will open.

Emergency system:

If you forget your personal code or the batteries are dead, you can use the emergency system to open the safe. Remove the emergency key lock cover located in the middle of the plastic panel, insert the emergency key, turn it to the left, and turn the knob to the right at the same time. The safe will then open.

Low battery indicator:

When using the electronic system to open the safe, if the red indicator light flashes, you need to change the batteries immediately because the system is running low on battery power.

W W W . Q - C O N N E C T . C O M

MANUAL:



Importers:

Interaction-Connect S.A.
296-298 Route de Longwy
L-1940 Luxembourg, LU
info@interaction-connect.com

EVO Global Holdings Limited
Newland House, Unit 2, Express Way
Tuscany Park, Normanton, WF6 2TZ, UK
info@evo-group.co.uk
www.evo-group.co.uk